

## **SRMV**

# Single Relay Module (Voltage)

#### Important: Retain these instructions

These instructions shall be used by trained service personnel only. If the equipment is used in a manner not specified by these instructions, the protection provided by the equipment may be impaired.



https://partners.trendcontrols.com

## **CONTENTS**

 3
 Installation

 1
 Unpacking
 1
 4
 Disposal

 2
 Storing
 1

 
## 1 BOX CONTENTS

 




SRMV Installation Instruction (91-2853)


## 2 STORING











#### 3 INSTALLATION

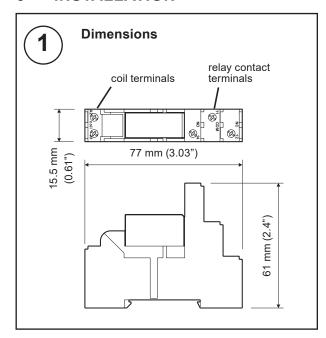

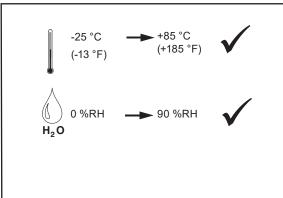


 


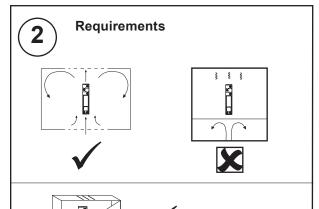


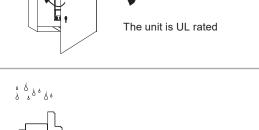


## 3 INSTALLATION (continued)

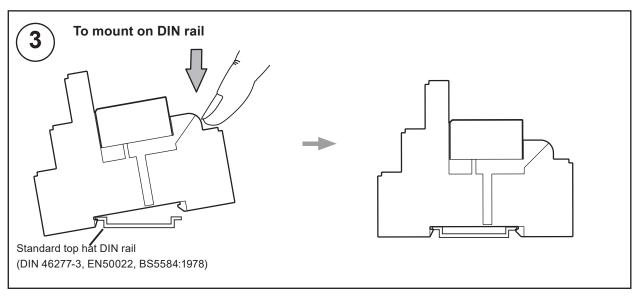

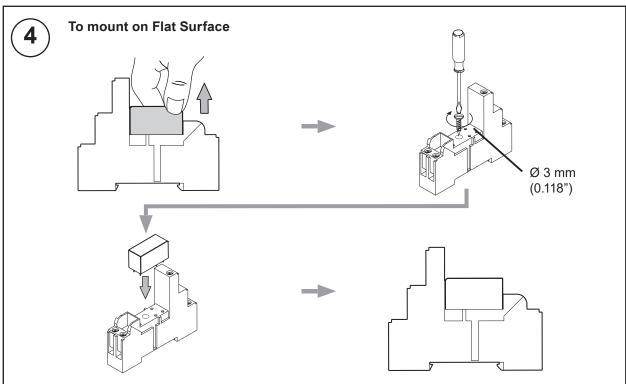


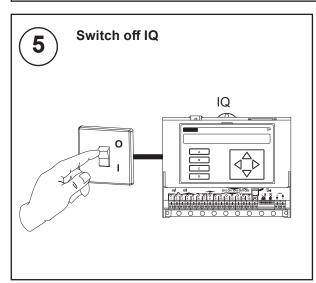


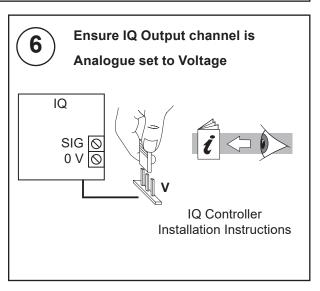


2


## 3 INSTALLATION (continued)

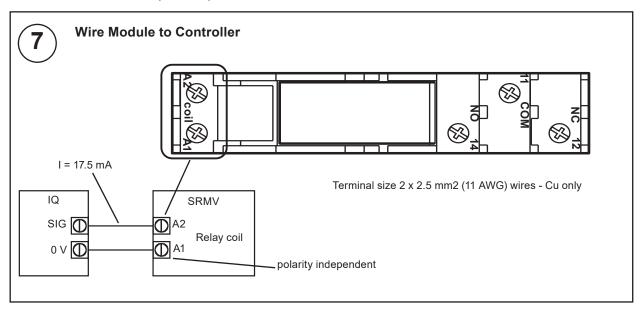


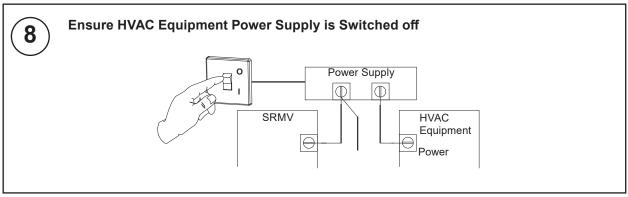


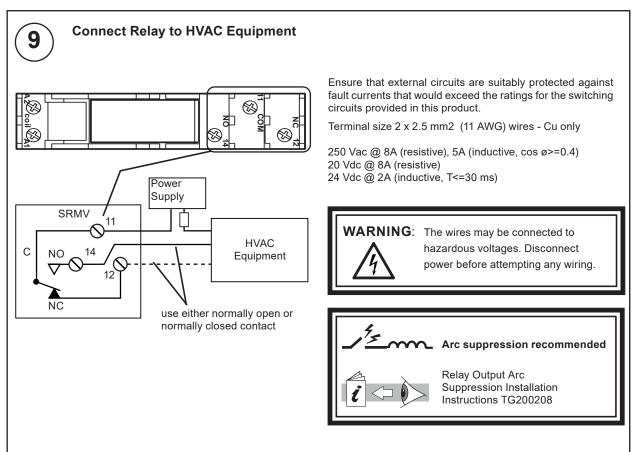


## 3 INSTALLATION (continued)

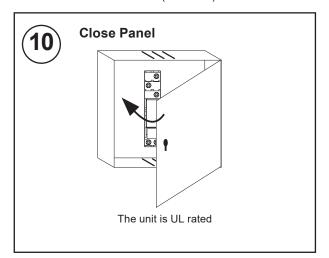


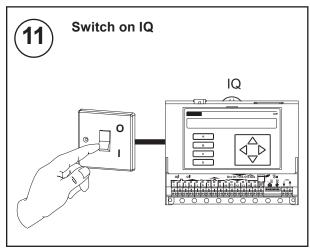

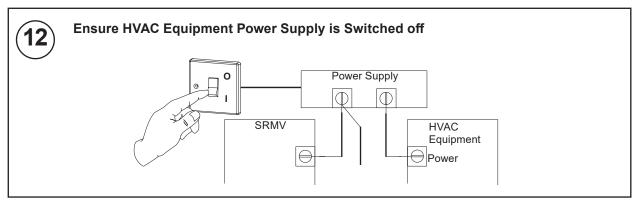

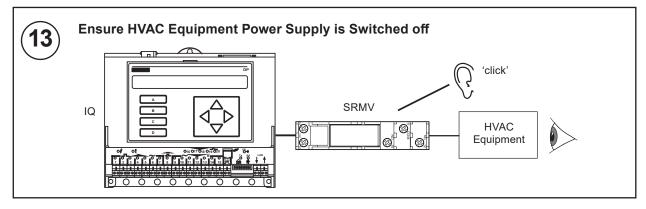

## 4 DISPOSAL

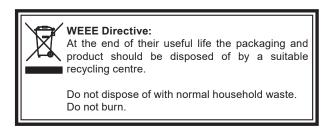

Please send any comments about this or any other Trend technical publication to techpubs@trendcontrols.com





© 2021 Honeywell Products and Solutions SARL, Connected Building Division. All rights reserved. Manufactured for and on behalf of the Connected Building Division of Honeywell Products and Solutions SARL, Z.A. La Pièce, 16, 1180 Rolle, Switzerland by its Authorized Representative, Trend Control Systems Limited.

Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

#### **Trend Control Systems Limited**

St. Mark's Court, North Street, Horsham, West Sussex, RH12 1BW, UK. Tel: +44 (0)1403 211888, www.trendcontrols.com